


QUICK REFERENCE

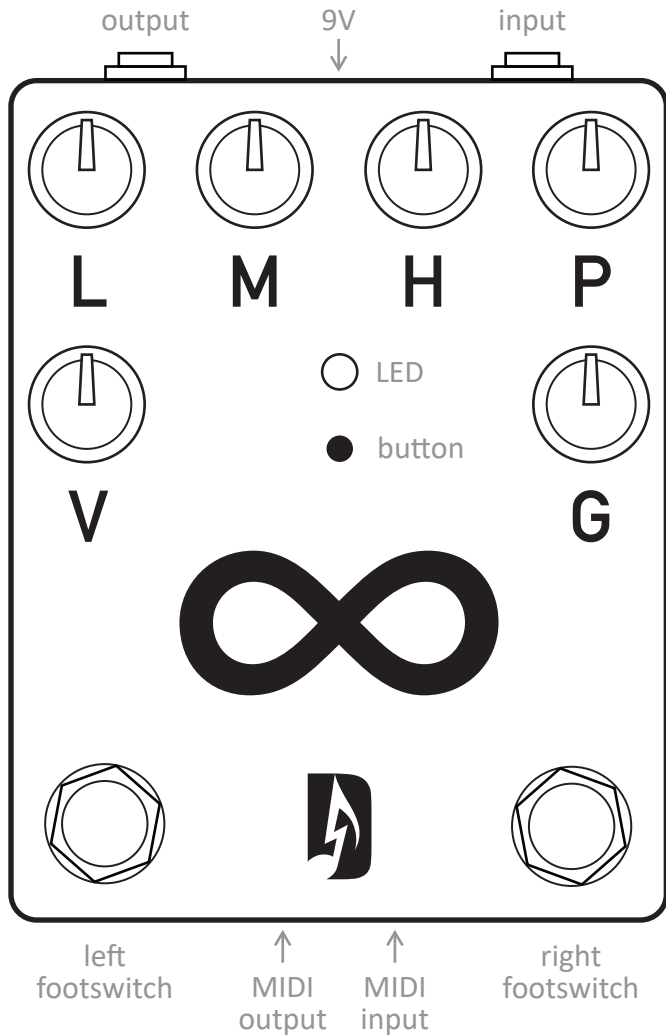

mode → knob ↓	play	edit	deep edit 1	deep edit 2
L	post low	pre low & fat	low <i>f</i>	low Q
M	post mid	pre mid	mid <i>f</i>	
H	post high	pre high	high <i>f</i>	high Q
P	presence	clean volume	presence <i>f</i>	
V	volume	master	warm / scoop	clean low
G	gain	flavor & color	LED brightness	clean high
	play	edit	long press	
button	edit	play	save	
left footswitch	previous preset	deep edit 1	previous bank	
right footswitch	next preset	deep edit 2	next bank	